 




BUTTONS

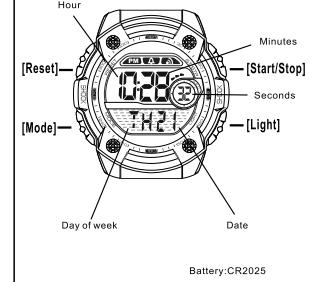


MODE SELECTION



 
 
a TIMEKEEPING

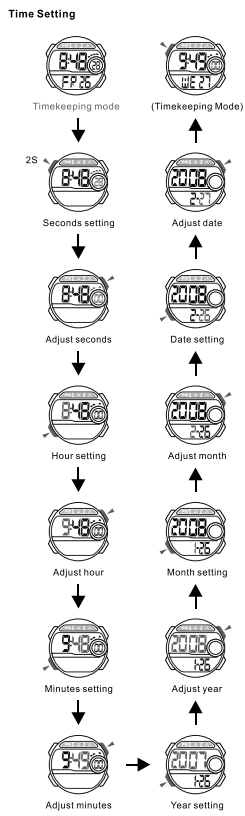


BACKLIGHT

 


b ALARM

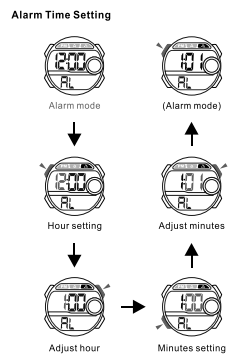  

c STOPWATCH

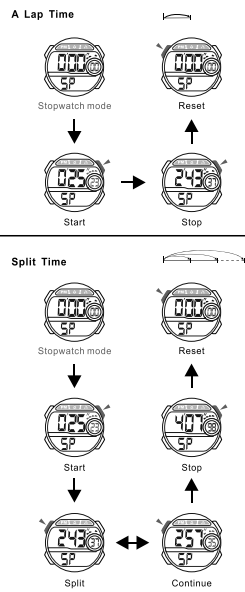 




d DUAL TIME

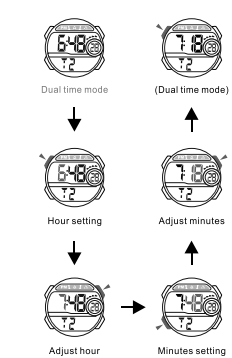 


MODE AUSWAHL



   
a ZEITMESSUNG

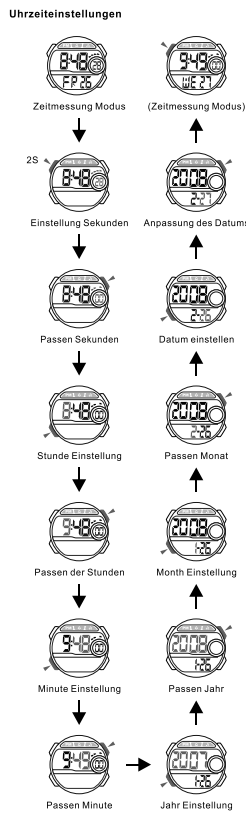



HINTERGRUNDBELEUCHTUNG

 


TASTEN

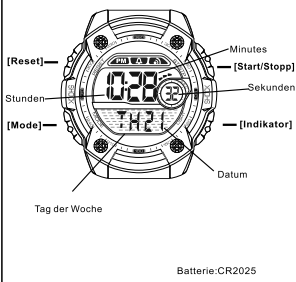 


b ALARM

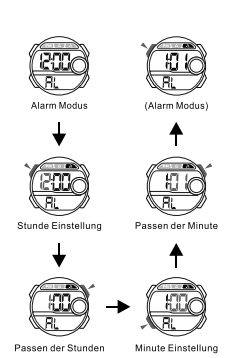  

c STOPPUHR

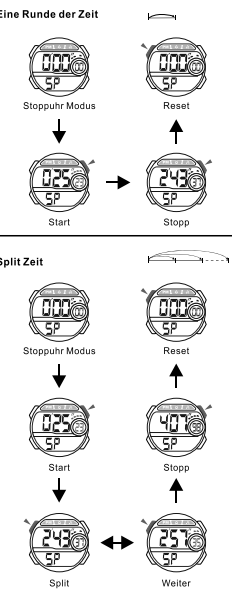 




d DUAL ZEIT

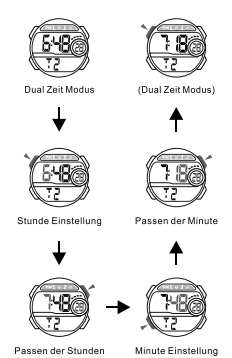 


SELECCIÓN DE MODO



   
a CRONOMETRAJE

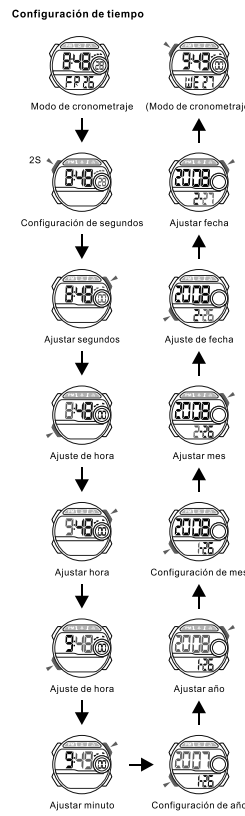


LUZ TRASERA

 


BOTONES

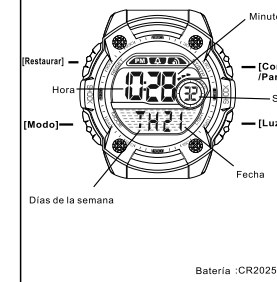 


b ALARMA

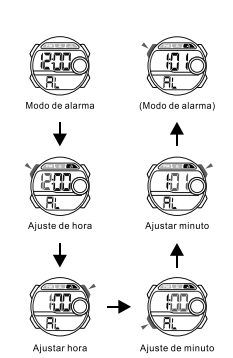 

c CRONÓMETRO

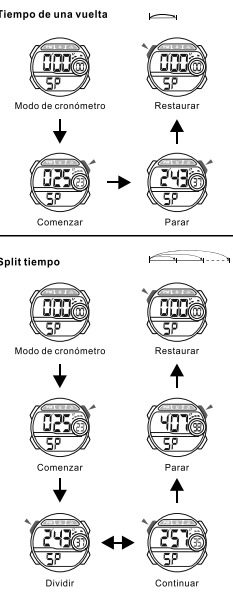 




d TIEMPO DOBLE

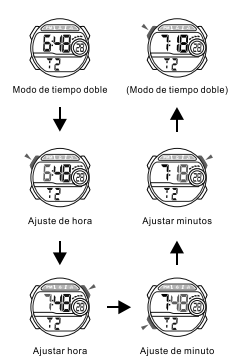 


SELEÇÃO DE MODO



   
a CONTAGEM

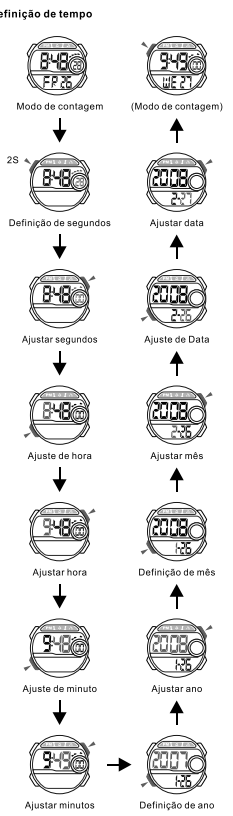


LUZ

 


BOTÕES

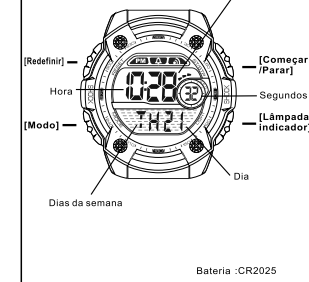 

b ALARME

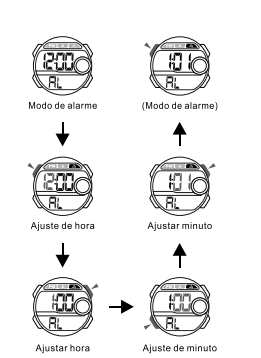 

c CRONÔMETRO

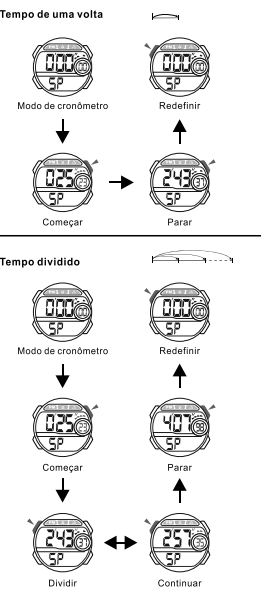 

d TEMPO DUPLA

